

1D Laser Barcode Scanner User Manual



Version

This manual is simplified, for detailed manual information please download the completed user manual from our website or obtain it from our distributor.

Factory Default



Note: Default interface: USB-HID

Setting Procedure:

Scan required bar codes

Example: Factory default, USB-HID, add suffix

"Enter"ect barcode as below

1 Factory Default



2 Enter



Interfaces



USB-IHD



USB-COM



PS2

 


RS232

Scan Mode



Manual



Continuous



Automatic Flashing

Auto-Induction



ON



OFF

Buzzer



OFF



ON



Low



High

Image Inverted



Direct



Reverse

Keyboard Language



USA



UK



French

Suffix Setting



Enter



Enter&Line feed



Cancel

USB-COM, RS232 Baud Rate Setting



4800



9600



19200



38400